

# JUWEL

*Prestigious Safes Since 1922*

## ELECTRONIC DIGITAL COMBINATION

" **BLADE RUNNER** **UNNE** **BLADE RUNNER** "



### GENERAL NOTES

**TYPES** - 4 VERSIONS ARE AVAILABLE: NORMAL (**V.01**), WITH CODE FOR USE AND EMERGENCY CODE (**V.02**), WITH TIME DELAY (**V.03**), FOR ENTRANCE DOORS (**V.04**). **IN ORDER TO KNOW WHICH INSTRUCTIONS TO FOLLOW, VERIFY THE SET VERSION : digit (ON/C), 12, (E) :**  
**THE NUMBER OF ACOUSTIC SIGNALS YOU HEAR NOW, REVEALS WHICH IS THE VERSION .**

**SELF SWITCHING-OFF** - The electronic system is provided with an alphanumeric keyboard and it switches off by itself. The key (**ON/C**) does switch it on again and it can be used also for cancelling eventual digitation mistakes.

**EXTERNAL EMERGENCY SUPPLY (and Reset)** - In case internal batteries get exhausted with closed safe, keep the 2 poles of a 9V-battery leaned in connection with the ones of the keyboard.

**OK** lights-up. Enter the opening input; the lock opens. Don't remove the emergency supply until the operation and the signal-lights are finished . This contact on the 2 poles (until the first **OK**), works as a **Reset** and it can also restore the lock's use after an accidental block caused by strong external ambient perturbations.

**BATTERY** - Use JUST ALKALINE batteries and of following types:

- one 6LR61 9V-battery (to be substituted once a year). In case this type is utilized, it is suggested to choose batteries of well-known quality (i.e. Duracell, Varta, Energizer, Mazda, etc).

- six LR6 1,5V-batteries (to be substituted once every two years). In this case a battery-holder can be supplied on demand.

**LOW BATTERY SIGNAL** - In case **ERROR** blinks by itself for **7 times**, and in close sequence, the battery is quite exhausted.

**COMBINATION** - More than 100 millions of different combinations can be set. It is recommended not to maintain the Factory-code.

**ANTIMANIPULATION SHUTDOWN** - In order to avoid a quick search of the opening-code by malicious persons, after three consecutive opening attempts with the wrong code, the keyboard gets stuck for **5 minutes** long. During this time **ERROR** blinks every 8 sec. An acoustic signal advises when you can act again.

**ANTIMANIPULATION WARNING** - After having pressed **ON/C**, in case you hear a **DOUBLE** acoustic signal, that means at least one opening attempt with the wrong code has been tried.

**OBSTACLES** - If an obstacle hinders the closing, **ERROR** lights-up and the lock opens again.

**ZERO SETTING OF THE COMBINATION** - If the door is open and the combination has been forgotten, it can be set back to 0000. Ask for instructions.

JUWEL S.p.A.

Certified EN ISO 9001:2000 - Via Re Umberto 99 - 20020 - Lainate (MI) Italy  
Tel +39 02 9376941 Fax +39 02 93570804 [info@juwel.it](mailto:info@juwel.it) [www.juwel.it](http://www.juwel.it)  
P.IVA 00692460421

## TYPE 01 - NORMAL

### A) HOW TO OPEN :

Press **(ON)**, digit the **Opening code** (initially 0000) and press **(E)**.  
If after having pressed **(ON)** **ERROR** blinks, the battery is exhausted.  
You can however proceed, but change it as soon as possible.

### B) HOW TO CLOSE : Press **(E)**.

### C) HOW TO CHANGE THE OPENING CODE

BY OPEN DOOR, BOLTS OUTSIDE (closed lock).

1. Open (as per point A). **OK** will light up continuously for **6 sec.**
2. Before **OK** switches off, press **(ON)** and KEEP PRESSED until **OK** blinks, while it is blinking :
3. Digit the **New code** (from 3 to 8 digits) and press **(E)**.
4. Once again, for confirmation: digit the **New code**, **(E)**.  
**OK** lights up.
5. Before closing the door, please check the **New Code** (close and open).



---

## TYPE 02 – WITH CODE FOR USE & EMERGENCY CODE (MASTER)

Each safe can be opened by the **Code for Use** (from 3 to 8 digits, 0000 initially) or by the **Emergency Code (MASTER)** (9 digits, 000.000.000 initially), by which it is possible to open the safe independently from the Code for Use. Each user can easily memorize both the Code for Use and the Emergency-code.

**Pay Attention:** each time you open by the Emergency-Code, the Code for Use is set to zero (0000).

IT IS IMPORTANT to change both the two codes and memorize different combinations from the ones of the Factory.

### A) HOW TO OPEN: (both with the Code for Use and the Emergency-Code: Press **(ON)**, digit the **Code**, press **(E)**.

### B) HOW TO CLOSE: Press **(E)** .

### C) HOW TO MEMORIZE THE CODE FOR USE: by open lock.

1. KEEP PRESSED **(ON)** UNTIL **OK** blinks, while it is blinking :
2. Digit the PERSONAL CODE (from 3 to 8 digits) and PRESS **(E)**.
3. Repeat for confirmation: **Code for Use**, **(E)** .

### D) HOW TO CHANGE THE EMERGENCY-CODE (MASTER) Start by closed lock.

1. Open **(ON)**, **Emergency-Code**, **(E)**. **OK** will light up continuously for **6 sec.**
2. Before **OK** switches off, press **(ON)** and KEEP PRESSED until **OK** blinks, while it is blinking :
3. Digit the **new Emergency-Code** (9 digits), and press **(E)**.  
Repeat for confirmation: **New Emergency-Code**, **(E)**.  
In case of error, the previous code remains memorized.  
PAY ATTENTION not to make a mistake, the Emergency Code cannot be set to zero.
4. Before closing the door, verify the new code(close and open).

JUWEL S.p.A.

Certified EN ISO 9001:2000 - Via Re Umberto 99 - 20020 - Lainate (MI) Italy  
Tel +39 02 9376941 Fax +39 02 93570804 [info@juwel.it](mailto:info@juwel.it) [www.juwel.it](http://www.juwel.it)  
P.IVA 00692460421

Prohibited partial reproduction also | © Juwel 2007

## TYPE 03 : WITH TIME DELAY

THE SAFE CAN BE OPENED ONLY AFTER A PROGRAMMABLE TIME DELAY FROM 00 TO 99 MINUTES.  
**It is supplied with 1 minute time delay.**

### A) HOW TO OPEN

1. Press **(ON)**, digit the **opening code** (initially 0000) and press **(E)**.  
If after having pressed **(ON)**, **ERROR** blinks, the battery is exhausted; you can however proceed, but change it as soon as possible. If the set time delay is **00** the lock opens, on the contrary the system is blocked during all the time delay and **OK** blinks every 16 sec.
2. When the time delay is expired, **OK** blinks quickly 5 times and you can proceed. Within 5 minutes, enter the code once again. Digit **(ON)**, **Code**, **(E)**. During these 5 minutes **OK** blinks every 8 sec.

### B) HOW TO CLOSE Press **(E)**.

### C) HOW TO CHANGE THE OPENING CODE

BY OPEN DOOR, BOLTS OUTSIDE (closed lock).

1. Open (as per point A). **OK** will light up continuously for **6 sec**.
2. Before **OK** switches off, press **(ON)** and KEEP PRESSED until **OK** blinks, while it is blinking :
3. Digit the **New Code** (from 3 to 8 digits) and press **(E)**.
4. Once again, for confirmation: digit the **New Code**, **(E)**. **OK** lights up.
5. Before closing the door, please check the new cod (close and open).

### D) HOW TO SET TIME DELAY

BY OPEN DOOR, BOLTS OUTSIDE (closed lock).

1. Open (as per point A). **OK** will light up continuously for **6 sec**.
2. Before **OK** switches off, press **(ON)** and KEEP PRESSED. until **OK** blinks, while it is blinking :
3. Press **(E)**, digit **00** and then the desired time delay ( **always 2 digits: 00..99** ), and press **(E)**.  
The 2 digits from 00 to 99 point out the time delay's minutes.

---

## TYPE 04 : VERSION FOR ENTRANCE DOORS

It's like the normal version, but the closing and the opening are driven by:

- from the outside of the door by a digital keyboard
- from the inside of the door by two buttons (not supplied)

JUWEL S.p.A.

Certified EN ISO 9001:2000 - Via Re Umberto 99 - 20020 - Lainate (MI) Italy  
Tel +39 02 9376941 Fax +39 02 93570804 [info@juwel.it](mailto:info@juwel.it) [www.juwel.it](http://www.juwel.it)  
P.IVA 00692460421

Prohibited partial reproduction also | © Juwel 2007