

## 2 WHEELS, KEY CHANGING

Prestigious Safes Since 1922

The lock is supplied with the following **INITIAL COMBINATION: 20 - 40**Set your personal combination. You can choose among **12.000 POSSIBLE COMBINATIONS**.

DON'T USE RED NUMBERS FOR YOUR SECOND NUMBER.

To unlock "dial" the "cot" combination by turning the dial (Fig. 1)

To unlock "dial" the "set" combination by turning the dial (Fig.1).

#### A) HOW TO DIAL THE COMBINATION

For example 20 - 40

**1 -** Starting from any number,

Turn right 2 times and continue up to the 1<sup>st</sup> number (20).

2 - Starting from the 1st number (20),

Turn left 1 time and continue up to the 2<sup>nd</sup> number (40).

B) TO UNLOCK

Dial the combination (see point A), then turn the dial slowly right hand until it stops.

#### C) TO LOCK

Turn left hand at least 3 full revolutions to break the combination completely.

### **D) CHANGING TO A NEW COMBINATION** (FIG.2).

This operation (**SETTING A NEW COMBINATION**) should be done with the door open and the combination locked.

- **1** Dial the set combination (A).
- 2 Insert the changing key in the key hole at the back of the door, in line with direction 1 (IN) (Fig.2). If the key does not enter freely up to a positive stop, the combination has been wrongly dialled. Redial the combination.
- **3 Turn the key from position 1 (IN) to position 2** (changing area). If it doesn't turn, it was not full inserted.
- **4 -** Accurately dial the **new** combination (A).

## ATTENTION! DO NOT USE THE RED NUMBERS FOR YOUR SECOND NUMBER.

- **5** Turn the key from position 2 to position 3 (OUT).
- **6 -** Remove the key. The new combination is now set in the lock.

# 7 - CAUTION! BEFORE CLOSING THE DOOR, TRY THE NEW COMBINATION SEVERAL TIMES (A-B-C).

If an error has been made in setting a new combination, the lock cannot be unlocked and you should reset to zero (E).

### **E) HOW TO SET TO ZERO** (FIG.3).

This operation can be done only if, having opened the door, we don't know which is the set combination.

- **1 -** Insert the key (Fig.3) into the hole at the back of the door and keep **lightly** pressed towards the inside of the lock.
- 2 Turn right 3 times the dial till the key advances towards the inside (5 mm approx.).
- **3** Turn left 2 times the dial till the key advances a second time.
- 4 Remove the key and insert it from its other side (Fig.2; **D**, 2).
- **5** Now set your choosen combination (**D**, 3....7).



